

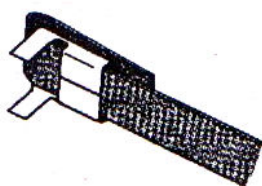


INSTALLATION INSTRUCTIONS FOR LEVER TYPE TOOL OPL

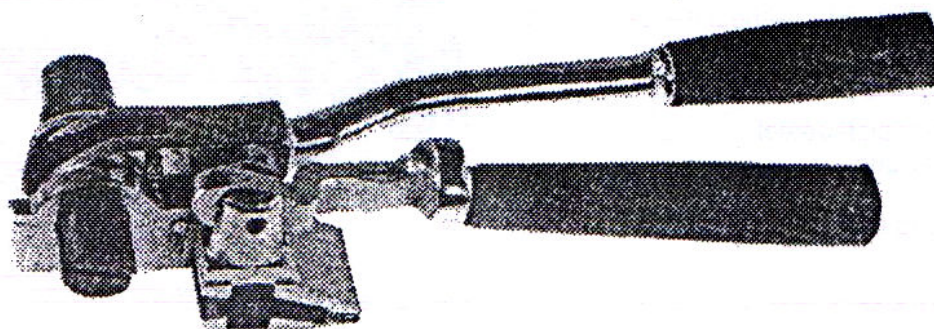

① Install the buckle.

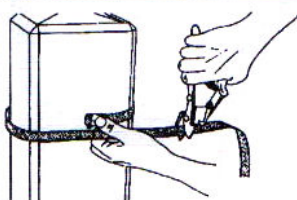


② Estimate the necessary strap length and cut it.




③ Insert the end of the strap in the buckle and introduce it in the tool.



④ Rotate the knurled ring till stop to lock the cutting lever arm.

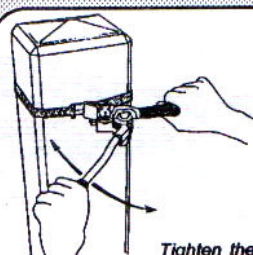


⑤ Tighten the strap by acting on the ratchet controlled lever arm.

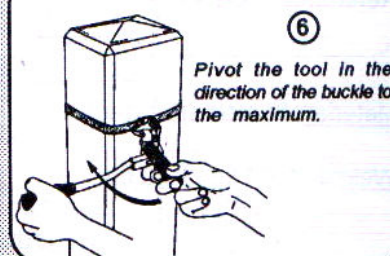


⑥ Pivot the tool in the direction of the buckle to the maximum.



⑦ Cut the strap after having released the lever arm by turning the knurled ring in the opposite direction of ④

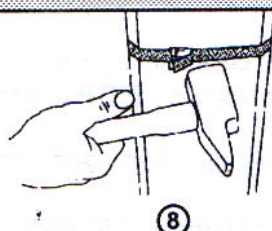

⑧ Bend the strap end and the buckle's ears.

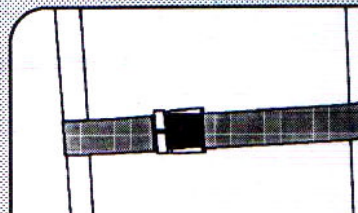

⑨ The strap is installed.